

# **EE 256: POWER AND ENERGY**

## **Experiment: Power Factor Improvement**

(3 hours)

**DATE:** .....

**CAUTION: High voltages are present in this Laboratory Experiment! Do not make any connections when the power is on. The power should be turned off after completing each set of measurements.**

### **INTRODUCTION**

The course EE256 - Power and Energy contains sections of (i) Three phase Systems, (ii) Measurement of Power/Energy, (iii) Tariff and Demand Side Management sections. This experiment covers power measurement of single-phase system and power factor improvement with a capacitor.

### **LEARNING OUTCOMES:**

- LO 2: Discuss and demonstrate different methods of power measurements (covering attributes of WA1 and WA2)
- LO 5: Calculate the power factor correction capacitors required for different applications (covering attributes of WA1 and WA2)

### **OBJECTIVES:**

To understand

1. the load voltage and current waveform patterns for different types of loads (LO2)
2. power factor improvement with fixed capacitors (LO 5)

### **APPARATUS:**

- Single Phase Transformer: 220V/110V
- Single Phase Wattmeter: 5A, 240V (YOKOGAWA)
- AC Ammeter: 0~5A (YOKOGAWA)
- AC Voltmeter: 0~300V (YOKOGAWA) & 0~150V (YOKOGAWA)
- Variable resistor: 1 $\Omega$ /13A
- Variable AC Supply
- Digital Oscilloscope
- Resistive Load: 330 $\Omega$ /2A.
- Variable Capacitor: (Terco MV1102)
- Variable Inductor: (ITALTEC or Terco MV1102)

## THEORY

### 1. Power factor calculation using meter readings

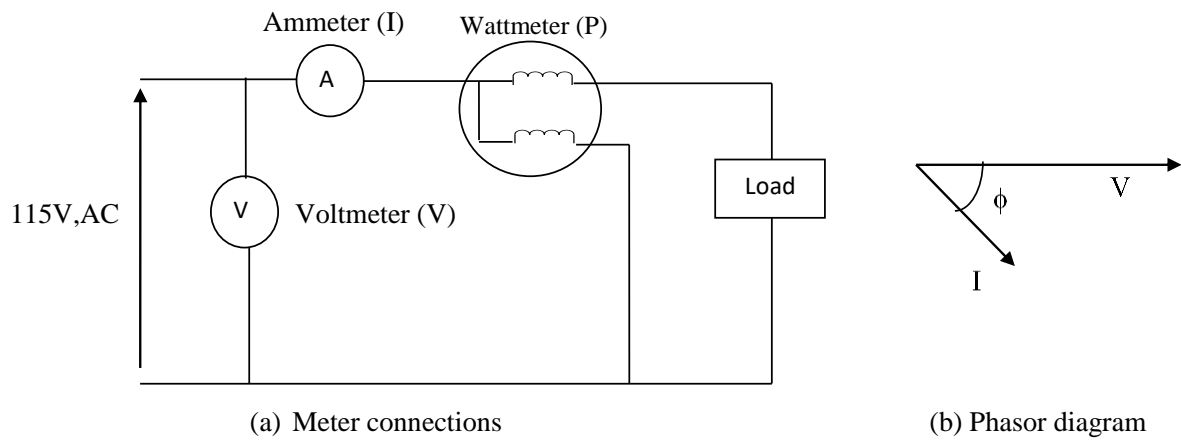


Figure 1: Power factor calculation

Consider Figure 01.

Active Power P,

$$P = V \times I \times \cos \phi$$

$$\text{Power Factor} = \frac{P}{(V \times I)}$$

### 2. Power factor calculation using wave forms

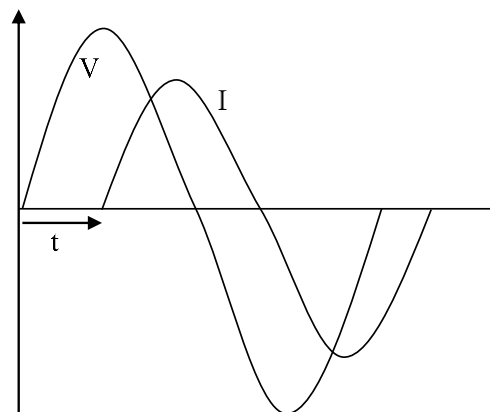


Figure 2: Voltage and Current Waveforms

Consider Figure2.

Phase difference in time = t s

$$\omega = 2\pi f$$

Phase difference in angle =  $(\omega t)$  rad

Power factor =  $\cos (\omega t)$

## **PART 01: RESISTIVE LOAD**

1. Connect the circuit as shown in Figure 3.

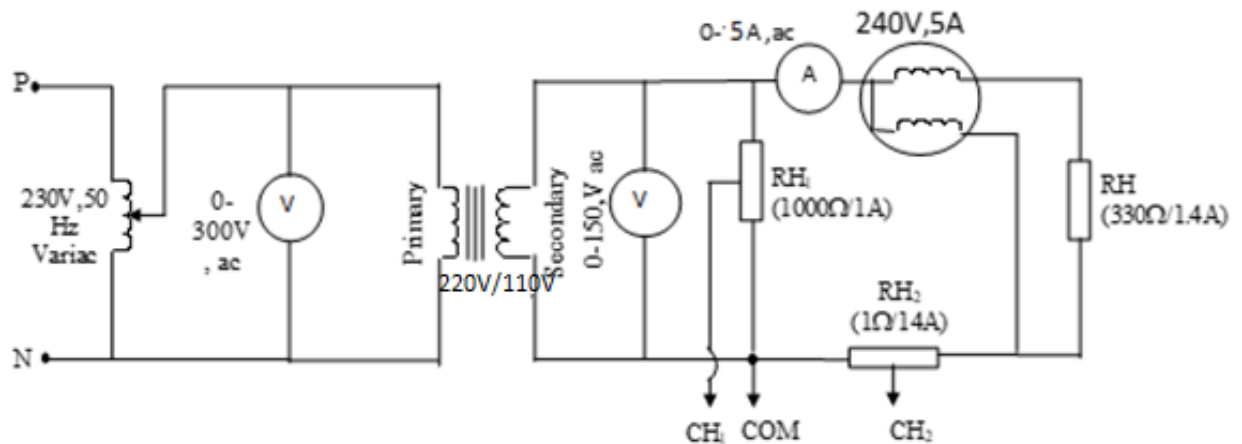


Figure 3. Circuit Diagram

2. Set the **Variac to zero position.**
3. Set the rheostat 'RH<sub>1</sub>' and 'RH<sub>2</sub>' to the minimum position.
4. Show the circuit to the instructor in-charge of the experiment.
5. Turn on the oscilloscope.
6. Set the Time/DIV of the oscilloscope to 0.2 ms/DIV.
7. Set the Volts/DIV of CH<sub>1</sub> of oscilloscope to 1V/DIV.
8. Set the Volts/DIV of CH<sub>2</sub> of oscilloscope to 1V/DIV.
9. Connect the input, as in Figure 3, to the supply.
10. Turns on the supply
11. Increase the Variac voltage gradually until the secondary voltage is 110V.
12. Adjust the rheostats 'RH<sub>1</sub>' and 'RH<sub>2</sub>' slightly to get the full wave form on the oscilloscope screen.
13. Observe record the voltage and current waveforms
14. Record waveforms displayed on the screen of the oscilloscope.
15. Record the readings of wattmeter, ammeter and voltmeters
16. **Gradually reduce the Variac output until the primary voltage of the transformer is zero.**
17. **Turn off the supply.**
18. **Disconnect the circuit input from the supply.**

## **PART 02: RESISTIVE LOAD PARALLEL WITH INDUCTIVE LOAD**

1. Connect the circuit as shown in Figure 4

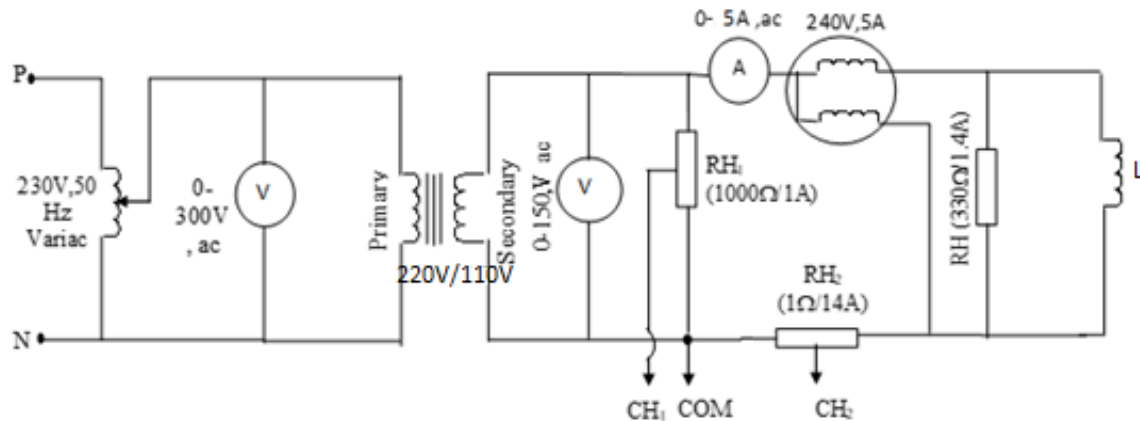


Figure 4: Circuit Diagram

2. Set the **Variac** to zero position.
3. Set the rheostat  $RH_1$ ,  $RH_2$  to the minimum position.
4. Show the circuit to the instructor in-charge of the experiment.
5. Turn on the oscilloscope.
6. Set the Time/DIV of the oscilloscope to 0.5 ms/DIV.
7. Set the Volts/DIV of CH<sub>1</sub> of oscilloscope to 1V/DIV.
8. Set the Volts/DIV of CH<sub>2</sub> of oscilloscope to 1V/DIV.
9. Connect the input, as in Figure 4, to the supply.
10. Turn on the supply
11. Increase the Variac voltage gradually until the secondary voltage is 110V.
12. Adjust the Rheostats  $RH_1$  and  $RH_2$  slightly to get the voltage and total current full wave form on the oscilloscope screen. Observe and record the voltage wave form and total current waveform.
13. **Gradually reduce the Variac to zero position and power off the circuit.**
14. Connect the circuit as shown in Figure 05. Adjust the Rheostats  $RH_1$  and  $RH_3$  slightly to get the voltage and inductor current full wave form on the oscilloscope screen. Observe record the voltage waveform and current flowing through the inductor waveform.

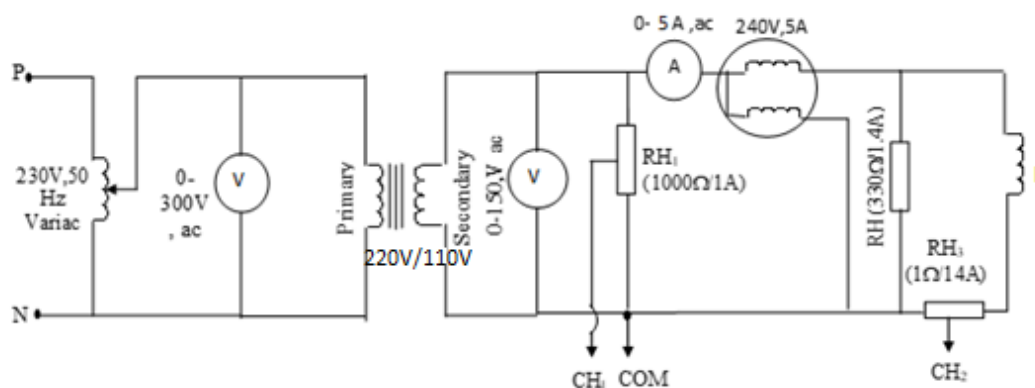


Figure 5: Circuit Diagram

15. Record the readings of wattmeter, ammeter and voltmeters
16. **Bring the primary voltage of the transformer to zero.**
17. **Turn off the supply.**
18. **Disconnect the circuit input from the supply.**

### **PART 03: PARALLEL RLC (RESISTIVE, INDUCTIVE, CAPACITIVE) LOAD**

1. Connect the circuit as shown in Figure 6

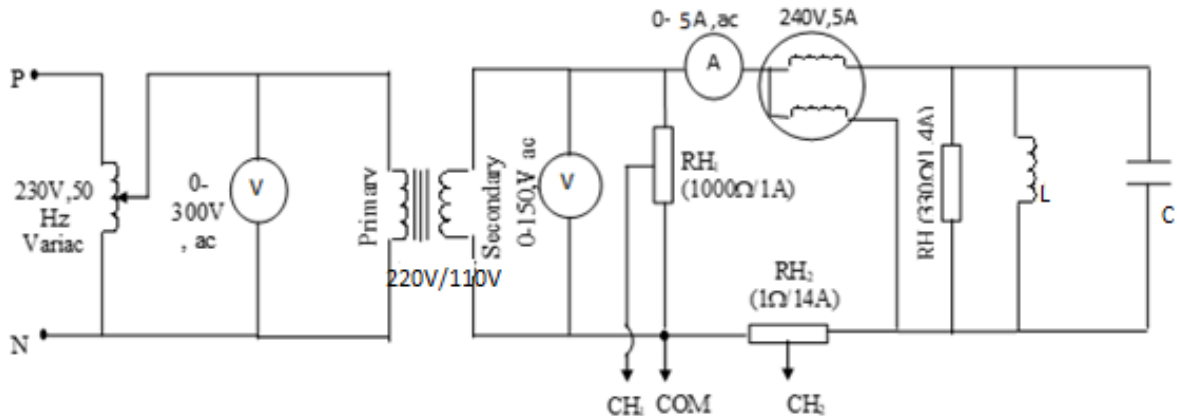


Figure 6: Circuit Diagram

2. Set the **Variac to zero position.**
3. Show the circuit to the instructor in-charge of the experiment.
4. Set the rheostat RH<sub>1</sub> and RH<sub>2</sub> to the minimum position.
5. Turn on the oscilloscope.
6. Set the Time/DIV of the oscilloscope to 0.5 ms/DIV.
7. Set the Volts/DIV of CH<sub>1</sub> of oscilloscope to 1V/DIV.
8. Set the Volts/DIV of CH<sub>2</sub> of oscilloscope to 1V/DIV.
9. Connect the input, as in Figure 6, to the supply.
10. Turn on the supply.
11. Increase the Variac voltage gradually until the secondary voltage is 115V.
12. Adjust the Rheostats RH<sub>1</sub> and RH<sub>2</sub> slightly to get the voltage and total current full wave form on the oscilloscope screen. Observe and record the voltage wave form and total current waveform
13. **Gradually reduce the Variac position to zero and power off the circuit.**
14. Connect the circuit as shown in Figure 7. Adjust the Rheostats RH<sub>1</sub> and RH<sub>3</sub> slightly to get the voltage and capacitor current full wave form on the oscilloscope screen. Observe and record the voltage across the load waveform and current flowing through capacitor waveform.

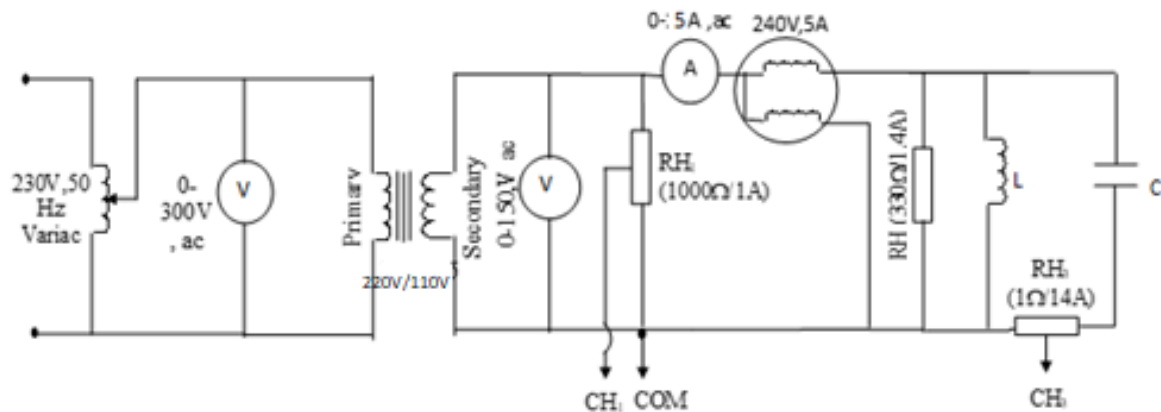



Figure 07: Circuit Diagram

15. Record the readings of wattmeter, ammeter and voltmeters.
16. Increase the capacitance in your circuit one step at a time. Note that the line current diminishes as capacitance is added. At some point, as you keep adding more capacitance the line current will start to increase. (The line current has gone through its minimum value). Minimum line current can be obtained graphically using the variation of the line current vs. capacitance.
17. Bring the primary voltage of the transformer to zero by reducing the Variac output voltage.
18. Turn off the supply and disconnect the circuit input from the supply.

## **OBSERVATIONS:**

### **PART 01**

#### **Voltage and Current Waveforms**


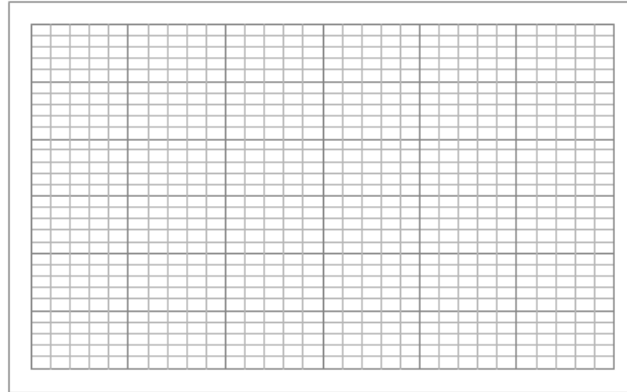


**Figure 1: Voltage across the resistor and current flowing through the resistor**

#### **Meter readings**

Voltmeter reading/V	Ammeter Reading/A	Wattmeter reading/W

### **PART 02**

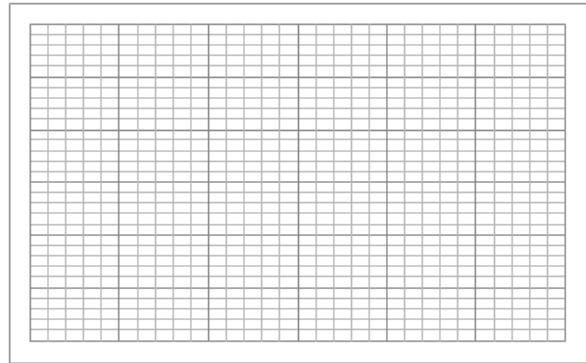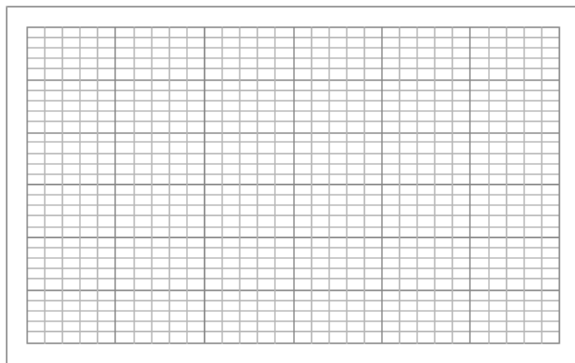


(a) Voltage and Total Current Waveforms      (b) Voltage and Inductor Current Wave forms

**Figure 2: Voltages and currents of the system**

#### **Meter readings**

Voltmeter reading/V	Ammeter Reading/A	Wattmeter reading/W

### PART 03

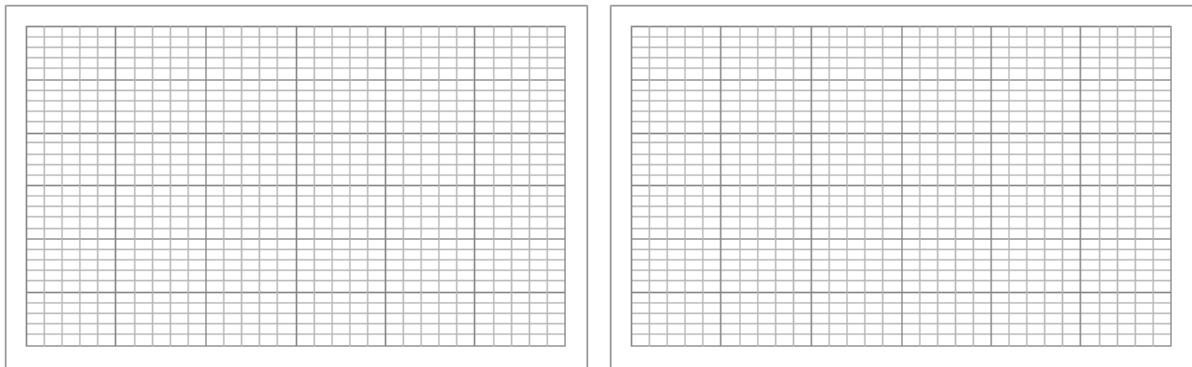

(a) Voltage and Total Current Waveforms      (b) Voltage and Capacitor Current Wave forms

Figure 3: Voltages and currents of the system

#### Meter readings

Capacitor Value/ $\mu\text{F}$	Voltmeter reading/V	Ammeter Reading/A	Wattmeter reading/W

### CALCULATIONS

#### PART 02

1. Calculate the power factor using meter readings
2. Calculate the power factor of the system using waveforms



### **PART 03**

1. Calculate the power factor using meter readings
2. Calculate the power factor of the system using waveforms
3. Can you observe an improvement in the power factor compared to part2? Explain the reason

.....

.....

.....

.....

.....

.....

.....

### **DISCUSSION**

1. What is the purpose of using a transformer in the test set up?
2. Why the watt meter readings in Part 1 and Part 2 are different?
3. Explain the reason for wave form distortion, when a capacitive load is connected.